




Endcap Sign Channel Systems

- 1. Insert screws through front of sign channel then secure arms to channel with plastic thumb nuts.
- 2. Peg board mounting (see instructions to the right)
- 3. Insert arms into back plates.
- 4. Slide signs into front and back J-Channels.





Finished Look at Highest Position

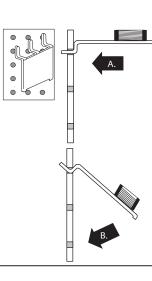



A. Determine sign channel height position* above gondola for backplate and insert the top prongs of backplate into pegboard. *Can be inserted from 2nd set of holes from top to have highest lift above product or insert into 7th-8th set of holes from top to make sign channel flush with top of gondola.

B. Lower backplates to rest flush against pegboard.

Repeat steps A and B* for second backplate when ready to move to Step 3. *Place the second backplate to align with arms.

(The backplates should be inserted between the 4th & 7th holes from the left & right sides of the uprights.)

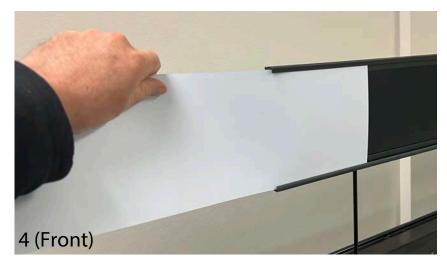

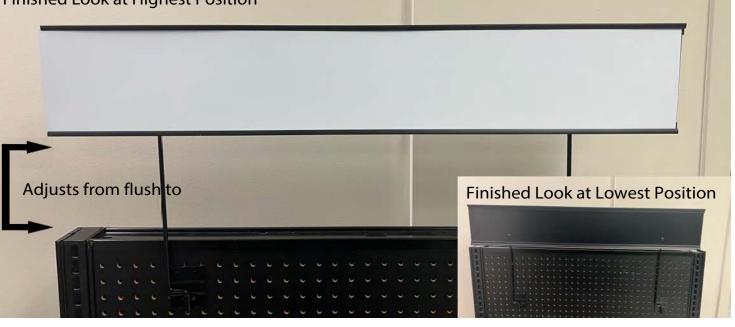



1950 Austin Drive • Troy, Michigan 48083-2205 800-992-5233 • 248-589-3272 • Fax 248-589-1535 Email: hq@tmshea.com • www.tmshea.com











